 


CineLight Production 30[®]

Tunable SoftLIGHT LED PANEL[®]

Specs & Performance: Tunable Model

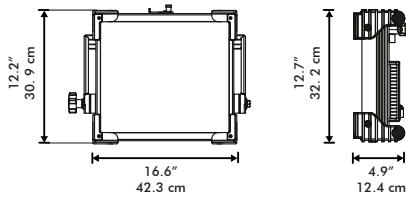

Tunable Model

CineLight 30[®] POWERCON
Code: G6LCNT102
CCT: 2700K - 6600K
Color Rendering Index: +90
Weight: 10 lb (4.5 kg)

Tunable Model

 
CineLight 30[®] V-MOUNT
Code: G6LCNT103
CCT: 2700K - 6600K
Color Rendering Index: +90
Weight: 10 lb (4.5 kg)

Tunable Model

CineLight 30[®] GOLD-MOUNT
Code: G6LCNT104
CCT: 2700K - 6600K
Color Rendering Index: +90
Weight: 10 lb (4.5 kg)



Parts of the CineLight Production 30[®]

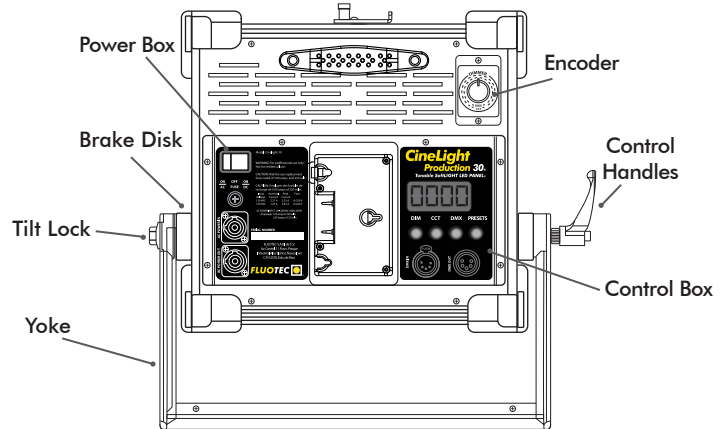

Fuses & Power Consumption

Note - Most electrical equipment briefly consumes a higher amount of electrical current during startup (ignition). Consult the chart below to confirm that your electrical wiring is sufficient for the fixtures used. All fuses must be rated at 250VAC. **CineLight 30[®]** auto-set from 90-240 VAC.

MECHANICAL CHARACTERISTICS			ELECTRICAL MEASUREMENTS	
MODEL	DIMENSIONS	WEIGHT	Voltage [V]	90-240
G6LCNT102	12.2" x 16.6" x 4.9" 30.9 cm x 42.3 cm x 12.4 cm	10 lb (4.5 kg)	Power [W]	57
G6LCNT103			Current [A]	0.90
G6LCNT104				
CineLight 30 [®] Tunable SoftLIGHT LED PANEL [®] 2700K-6600K				

 
Each fixture comes with:



16 ft AC Cable
POWERCON
 with Switch
G6PLT041



Spigot Mini
G6FLT086



Control Grid 50[®]

 
Note - There are three **CineLight 30[®]** versions, one with AB-Mount, one with V-Mount and one without mount with AC POWERCON direct output. The type of accessories that have been included will depend on the selected version.

Manual & DMX Operation


Controlling CineLight 30[®]

The CineLight 30[®] Tunable Softlight LED PANEL[®] are dimmable, which can be controlled either manually on the fixture or remotely via a console with DMX-512 protocol. To operate the Control Panel, first familiarize yourself with the placement and functions of the controls.

CineLight Production 30[®] Gold Mount Version

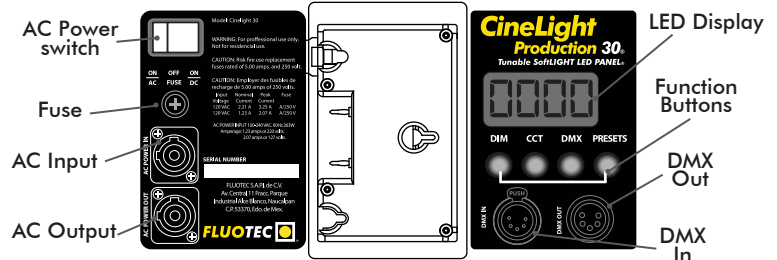

 CineLight Production 30[®] V-Mount Version

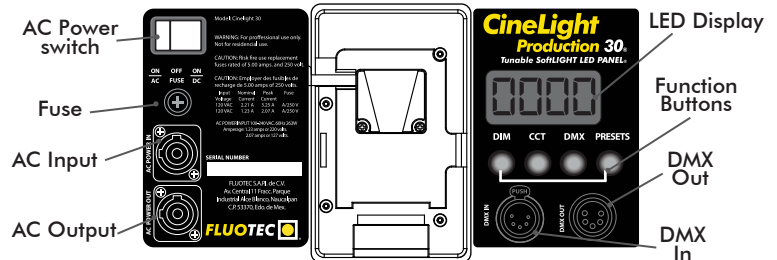

Mounting the Fixture

On Grid:

Attach clamp tightly to yoke of fixture, according to clamp mfrs. instructions. Hang clamp on pipe or grid and tighten the large screw so that the clamp and fixture are securely mounted. Do not loosen bolt attaching clamp to fixture, to position light. Attach safety cable between the fixture and the rail for necessary security.

On Stand:

Using the Spigot Mini (included) stand fitting. Choose proper size stand for fixture. Always use sufficient stabilizing weight on stand base.

Allows mounting the fixture on Spigot Mini (included) male stand stud. Make sure the stand is large enough to support the weight of the fixture while maintaining good balance at the desired height. Attach the female stand-fitting tightly to the yoke and rotate yoke so it is on the underside of the fixture. Tighten yoke, clamp locking lever, and place female stand-fitting over stand, making sure that its locking screw is loosened enough to allow the fitting to completely fit over the Spigot Mini stand stud. Tighten knob, making sure its screw is under the safety cut of the stand fitting stud. Add additional weight to base of stand for increased stability.

CineLight Production 30®

Tunable SoftLIGHT LED PANEL®

Tabla1. Menu CineLight 30® Tunable SoftLIGHT LED PANEL®

Menu CineLight 30® Tunable SoftLIGHT LED PANEL®			
FUNCTION		DEFAULT SETTING	DESCRIPTION
DIMM		100	Manual Dimming [0-100], it stops in the upper and bottom values.
CCT	2CH	4,200	CCT Scale [2700-6600K].
	3CH	D= 0, T= 100	Tungsten CCT STEPS: [T 0-100], Daylight CCT STEPS: [D 0-100].
CCT 2 SEG		2CH	2 Channels control set up: CCT 2700-6600K, 3 channels CCT arbitrary.
DMX		1	2 Channels DMX Config "2CH", first channel is dimming, the second is CCT taking the next direction forward [1-511].
			3 Channels DMX Config "3CH" first is Dimming, second one is Tungsten, the third one is Daylight.
DMX 2 SEG		Snd 0	Master model activation, sending DMX signal to the Channels 1 and 2 (2 Channels) and 1, 2, 3 (3 Channels) Dimming, second one Tungsten and the third one Daylight.
PRESETS	2CH		M1 [2700], M2 [3000], M3 [3200], M4 [4000], M5 [4600], M6 [5000], M7 [5600], M8 [6600].
	3CH		M1 [D=0, T=100], M2 [D=25, T=100], M3 [D=75, T=100], M4 [D=90, T=100], M5 [D=100, T=100], M6 [D=100, T=75], M7 [D=100, T=25], M8 [D=100, T=0].
	rev	1.0f 5oct16	Version firmware
	mod	CineLight	Model

Warnings

CineLight 30® Tunable SoftLIGHT LED PANEL® equipment is a professional lighting system. Read these instructions, as well as accessory instructions and applicable warnings before operating.

- **Do not leave fixture unattended.**
For fixed (stationary) use in studios, theaters, and similar locations.
- **Not for household use.** Use only for photographic lighting (television, video & film).
- **Always unplug unit before** changing fuse.
- **Do not use near standing water.**
- **Never bypass plug's ground pin.**
- **Do not interfere with unit's ventilation.**
- **Do not operate unit with** Accessory Barndoors closed.
- **Make sure clamp is tightened** at yoke.
- **Always use Safety Cable**, when attaching to overhead pipes or grids.
- **Always use with supplied** AC Cable.

LED Warnings

- **Avoid looking directly at the LED's** for extended periods of time.

General Recommendations

1. Do not operate this product if it's damaged.
2. To protect yourself from an electrical discharge, avoid contact with water or other liquids.
3. The UNIT HAS TO BE POWERED OFF before you connect it to the electrical grid, also when striking the UNIT turn it off before disconnecting it from the power grid.
4. In case of failure or malfunction to avoid electrical discharge, DO NOT disassemble this UNIT call your **FLUOTEC® AUTHORIZED SERVICE CENTER**. Wrong reassembly or disassembly of this unit may cause a malfunction.
5. The use of accessories not designed or recommended by FLUOTEC can cause hazardous conditions or damage the fixture.

Cleaning

CHASIS

Use a moist, almost dry cloth to remove dust and any stain.
NEVER USE ANY ABRASIVE FIBER PAD AND NEVER USE SOLVENTS.
They can damage the fixture or it's finish.

Problems, repairs & info

Repairs, problems, suggestions and requests for brochures/catalogs, instructions and parts lists can be handled through your **Authorized FLUOTEC® Dealer/Distributor** or directly through **FLUOTEC®**. Electrical repairs should be made only by **FLUOTEC®** or by a qualified electrician.

FLUOTEC®

www.fluotec.net

International Sales

Tel.: 1 (877) 556 5554

Email: info@fluotec.net

FLUOTEC 

